



How to change springs on a Hydra shock

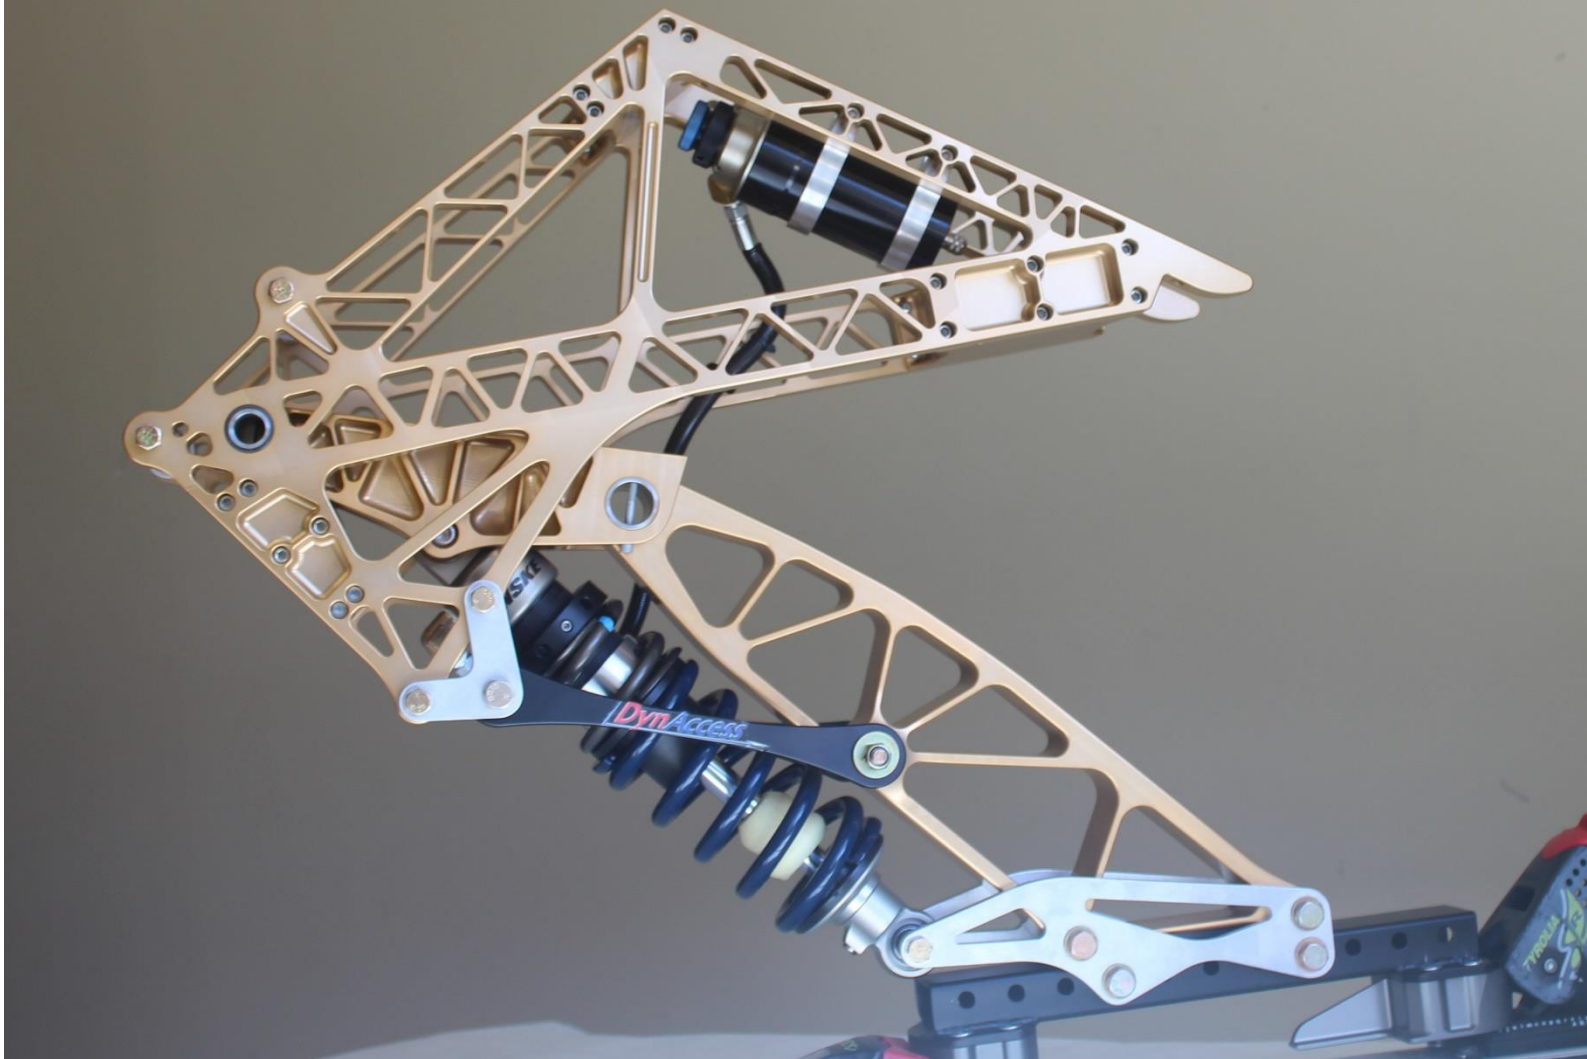



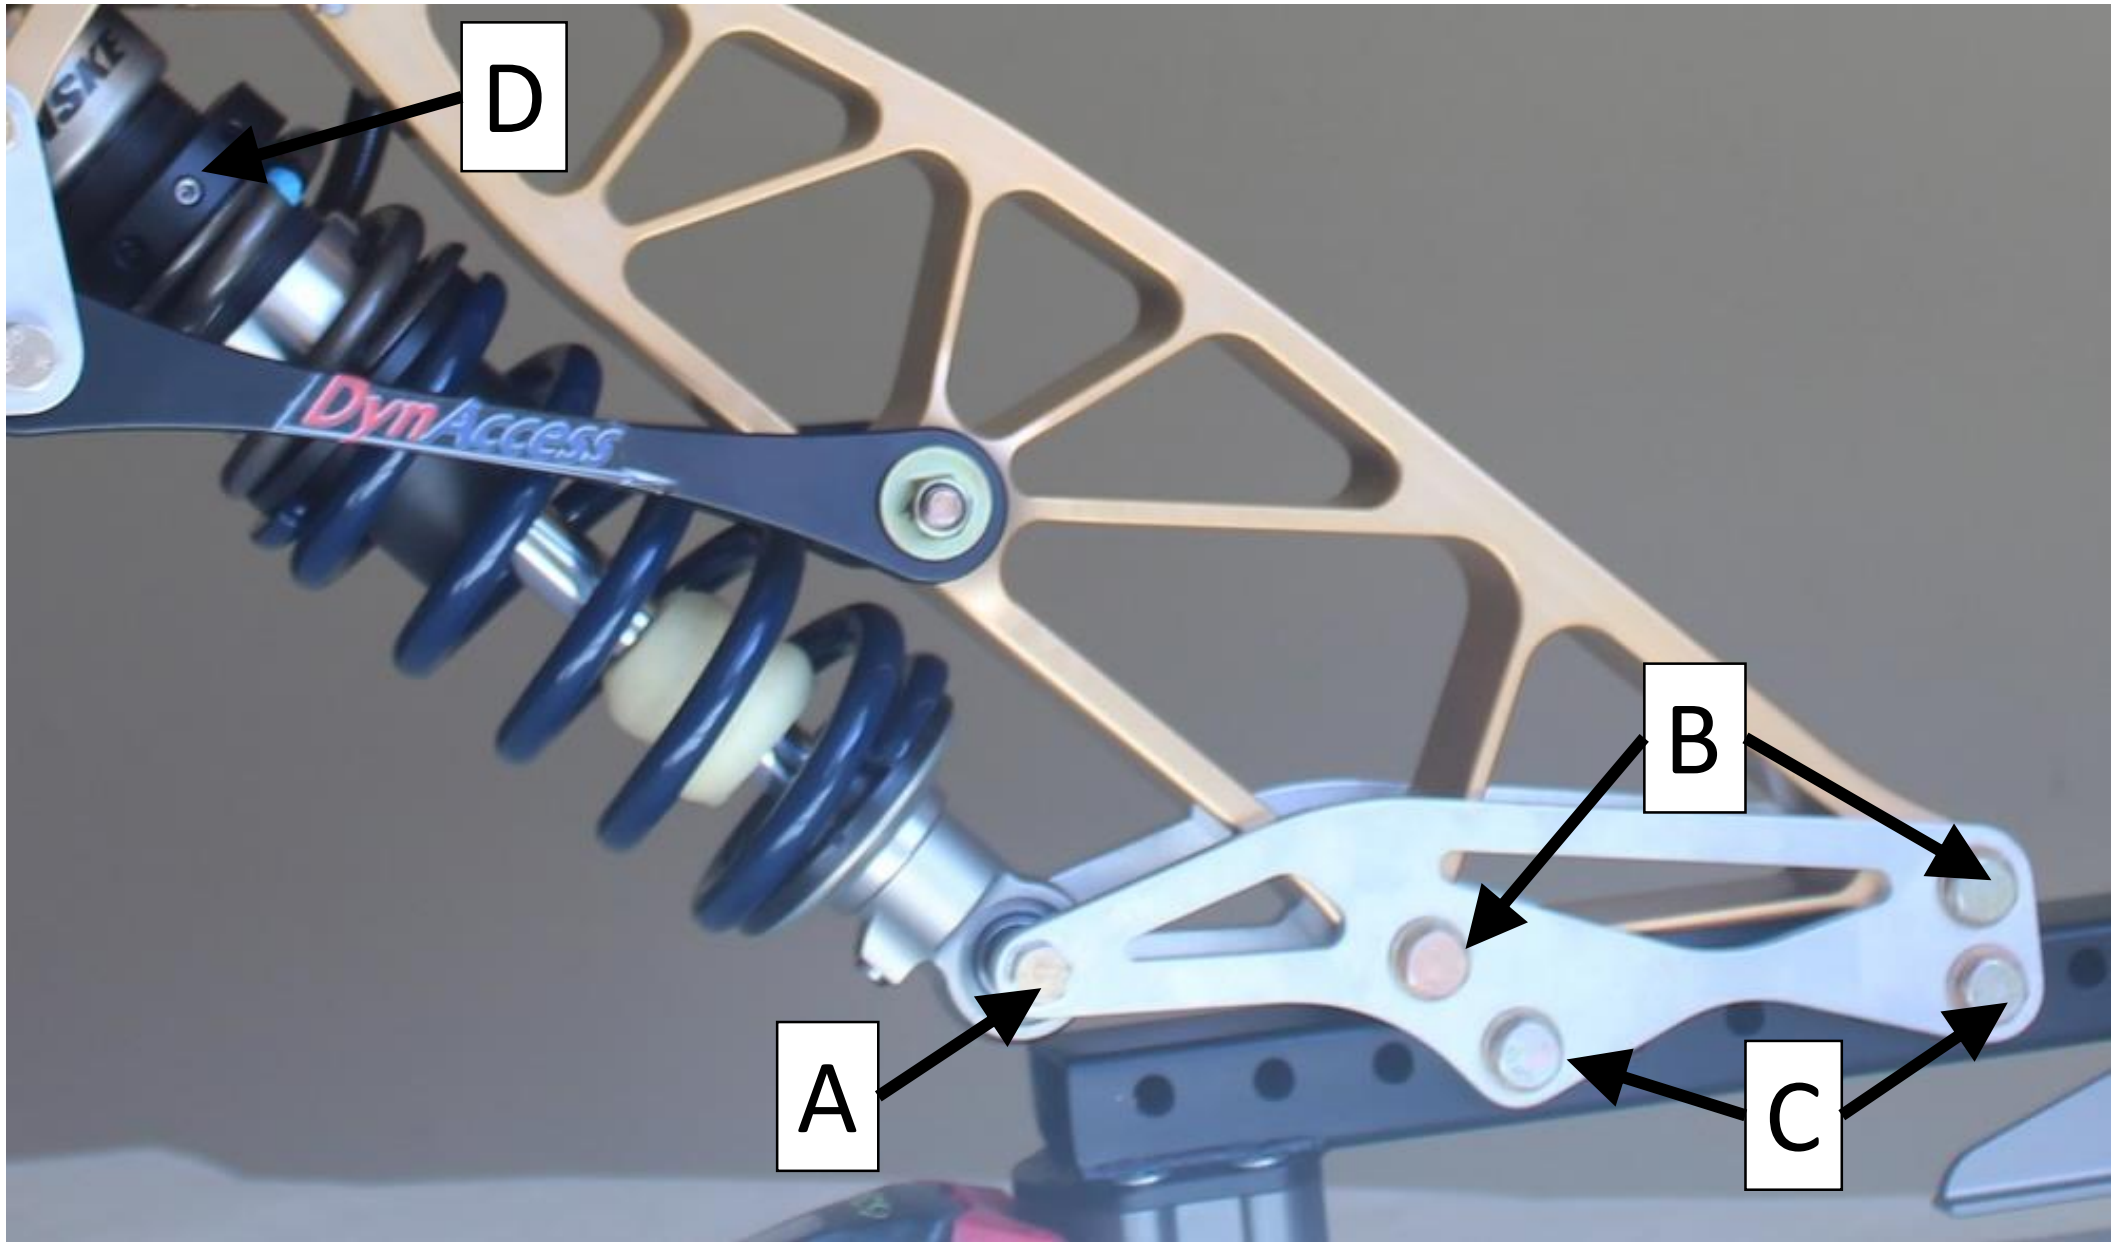

Remove bolt C and the lower shock mount.

If the shock cannot swing out then the foot also needs to be removed.

Loosen the two bolts B (approx. one turn) and remove the two bolts C, then remove the foot .



Loosen the set screw D and turn the ride height adjuster (upper spring perch) up on the shock body as far as it goes.





Press up the bump stopper on the shock's shaft approximately 25 mm (1")



Remove lower shock Mount.



Remove the lower spring perch, then remove the main spring, spring divider, tender spring and crossover ring .





Installation in the reverse order.



Do not over-tighten any bolts. Tighten the set screw lightly to avoid damaging the threads on the shock body.



After all has been reinstalled, adjust the rebound damping (REB) for the new springs.